

# DIGITAL SATELLITE RECEIVER

## *USER'S MANUAL*



**EN**  
**FR**  
**DE**  
**IT**  
**ES**

User manual : [www.jiubei.eu/manuals](http://www.jiubei.eu/manuals)  
Mode d'emploi : [www.jiubei.eu/manuals](http://www.jiubei.eu/manuals)  
Bedienungsanleitung : [www.jiubei.eu/manuals](http://www.jiubei.eu/manuals)  
Istruzioni per l'uso : [www.jiubei.eu/manuals](http://www.jiubei.eu/manuals)  
Manual de usuario : [www.jiubei.eu/manuals](http://www.jiubei.eu/manuals)

# Important Safety Instructions

**Thank you for choosing our product. Before installation, we would like to remind you of some notes, which is very important for operating safely and properly, as follows:**

1. Be sure to read this user manual before starting your operation.
2. Never open the cover. It is very dangerous to touch the inside stuff of the unit due to possible electric shock.
3. If you don't use this unit for long time, please pull the power plug out from the outlet. Do not use a damaged power cord.
4. Do not touch the power with wet hands. If there is liquid flow into the unit, pull out the power cord immediately because it may cause fire or electric shock.
5. Place the unit in a well ventilated and no heat environment.
6. You must install the dish with correct direction and angle. If the dish is not working properly, contact your local dealer.
7. Install the unit horizontally. Unbalanced installation may cause the unit to be damaged by it.
8. When the unit is suddenly moved to a hot area from a cold area, it may cause some problems. In that case, turn off the power, and turn on again after 1-2 hours.
9. Install the unit in a place with:
  - good ventilation
  - suitable temperature
  - no direct sunrays
  - low humidity
  - low vibration influence
10. Do not put heavy objects on the unit.

## General Information

The digital satellite receiver allows you to view digital satellite programs. This user's manual covers the installation of the receiver and the necessary steps to operate various features. It also explains special features available only in this receiver in details, which will help you to take full advantage of these features.

## Main Features

- Fully DVB-S/S2 compliant
- MPEG-2/MPEG-4(H.264) SD/HD decoding (MP@ML/HL)
- DiSEqC1.0/1.1/1.2, USALS, Unicable and MDU supported
- USB Wi-Fi dongle supported (Ralink7601)
- Youtube
- USB PVR and Timeshift supported
- Multimedia(MKV/AVI/MPG/MOV/JPG/PNG/MP3 and so on) supported
- Easy and fast software upgrade through USB/Network/OTA
- More than 5000 channels memory space
- 8 Favorite channel groups & 7 days Electronic Program Guide (EPG)
- Channel Search by automatic, manual and fastest blind scan
- Teletext output with both VBI and OSD
- Multi-language Subtitle output supported
- Multi-language and 32 bits true color on screen display (OSD )supported
- Aspect Ratio 4:3 and 16:9

- Signal lever & quality indicator
- Parental Lock/Channel Lock
- Database backup to USB disk and restore from it at any time

## Connection

Connecting to TV set and Satellite Dish via HDTV cable.



| KEY        | FUNCTION   |
|------------|--|
| USB 2.0*2  | For USB PVR, Timeshift and Media Player, Wi-Fi/3G Dongle |
| Display IR | IR extender cable with 4*7 channel display               |



|        |   |
|--------|---|
| LNB IN | For DVB-S/S2 signal input                             |
| HDTV   | 19 PIN Female 1.3                                     |
| RS-232 | Mini-Jack convert to RS-232                           |
| AV     | Mini-Jack convert to CVBS and Right/Left Audio output |
| DC-IN  | 12V/1A DC in  |

### PREPARATION

Read the instructions before connecting other equipments.

Ensure that you observe the color-coding when connecting audio and video cables

Please connect the device with TV by HDTV or CVBS output and setup output format accordingly.

## REMOTE CONTROL

All receiver features can be controlled with the remote control unit.

|              |                                 |
|--------------|---------------------------------|
| 1.POWER      | Power ON/Standby the receiver   |
| 2.MUTE       | Mutes the sound                 |
| 3.RED(TTX)   | Function key ( TeleText switch) |
| 4.GREEN(SUB) | Function key (Subtitle switch)  |



|                               |   |
|-------------------------------|---|
| <b>5.YELLOW(ZOOM)</b>         | Function key (Zoom)   |
| <b>6.BLUE</b>                 | Function key  |
| <b>7.&lt;&lt; FB</b>          | Fast backward to view the current playing movie or channel                            |
| <b>8.&gt;&gt; FF</b>          | Fast forward to view the current playing movie or channel                             |
| <b>9.  &lt;&lt;(PREV)</b>     | Go to the previous recorded file, and play it   |
| <b>10.&gt;&gt; (NEXT)</b>     | Go to the next recorded file, and play it   |
| <b>11.TIMESHIFT</b>           | Begin to timeshift  |
| <b>12.&gt;   (PLAY/PAUSE)</b> | Pause when you play a recorded program or skip when you are recording                 |
| <b>13.■(STOP)</b>             | Stop record, timeshift or stop play recorded file                                     |
| <b>14.REC</b>                 | Begin to record when view program   |
| <b>15.SAT</b>                 | Switch between satellite group in menu  |
| <b>16.ASPECT</b>              | Switch Aspect Ratio quickly   |
| <b>17.SLEEP</b>               | Set sleep Timer   |
| <b>18.FORMAT</b>              | Quick change receiver's output resolution by one key                                  |
| <b>19.EPG</b>                 | Show EPG  |
| <b>20.INFO</b>                | Shows current channel's information   |
| <b>21.▲ UP</b>                | Channel change, or move cursor up   |
| <b>22.▼ DOWN</b>              | Channel change, or move cursor down   |
| <b>23◀ LEFT</b>               | Move focus left. (Also VOL-)  |
| <b>24.▶ RIGHT</b>             | Move focus right. (Also VOL+)   |
| <b>25.OK</b>                  | Confirm   |
| <b>26.MENU</b>                | Show main menu or back to full screen play program status from main menu or sub-menu. |
| <b>27.EXIT</b>                | Escape from present menu  |
| <b>28.FAV</b>                 | Display the favorite channel list   |
| <b>29.AUDIO</b>               | Switch among left audio/right audio/stereo  |
| <b>30.VOL +/-</b>             | Volume control  |
| <b>31.PAGE +/-</b>            | Page UP/DOWN  |
| <b>32.0-9</b>                 | Enter the channel's number  |
| <b>33.RECALL</b>              | Switch back to previous channel   |
| <b>34.TV/Radio</b>            | Switch between TV and Radio mode  |

# SPECIFICATIONS

| SECTION          | ITEM                       | DESCRIPTION   |
|------------------|----------------------------|---|
| PROCESSOR        | CPU                        | CS-8001   |
|                  | Flash Memory               | 4MB   |
|                  | DDR2                       | 512Mb   |
| DVB-S/S2 TUNER   | Input Frequency:           | 950 ~ 2150MHz   |
|                  | Input level:               | -80 ~ -20dBm  |
|                  | Input impedance            | 75 Ω  |
| CHANNEL DECODING | Demodulation               | QPSK, 8PSK, 16PSK   |
|                  | FEC mode                   | DVB-S: 1/2, 2/3, 3/4, 5/6, 7/8<br>DVB-S2: 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10 (QPSK) 3/5, 2/3, 3/4, 5/6, 8/9, 9/10 (8PSK)   |
|                  | Symbol Rate                | DVB-S: 2.0~45 MS/s  |
|                  | Demodulation               | QPSK, 8PSK, DVB-S2: 10-30 Mb/s (QPSK), 10-31Mb/s (8PSK)   |
| DEMULTIPLEXER    | Standard                   | ISO/IEC 13818-1   |
|                  | Input Max. Bit Stream Rate | 100Mbps(Serial)/12.5MBps(Parallel)  |
| VIDEO DECODING   | Standard                   | ISO/IEC 13818-2, MPEG-2 MP@ML, MPEG-4 AVC (MP L4.1)   |
|                  | Aspect Ratio               | 4:3, 16:9   |
|                  | Video Format               | PAL-B / NTSC-M / PAL-N / PAL-M  |
|                  | Video Resolution           | 1080P, 1080I, 720P, 480P/576P, 480i/576i SD compatible  |
| AUDIO DECODING   | Standard                   | ISO/IEC 13818-3   |
|                  | Decoding                   | MPEG-1 Layer I and II, MPEG-2, MPEG-4 AAC   |
|                  | Output Mode                | LPCM, RAW   |
|                  | Sampling Frequency         | 32, 44.1, 48KHz   |
|                  | Volume Level               | 24 Levels   |
| AV OUTPUT        | Video de-emphasis          | CCIR REC.405-1, 625LINES  |
|                  | Video bandwidth            | 5.5MHz  |
|                  | Video output impedance     | 75Ω   |
|                  | Video output level         | 1.0Vp-p   |
|                  | Audio output               | Stereo  |
|                  | Audio output frequency     | 20Hz~ 20KHz   |
|                  | Audio output impedance     | Low   |
|                  | Audio output level         | A 1.0Vrms ± 2dB into 10K.   |
|                  | Panel Interface            | <ul style="list-style-type: none"> <li>● 1 x AV (CVBS+R/L AUDIO)</li> <li>● 1 x HDTV</li> <li>● 1 x LNB IN</li> <li>● 1 x RS-232</li> <li>● 1 x IR FOR LED DISPLAY</li> <li>● 2 x USB 2.0 Port</li> </ul> |
| OTHERS           | Power input Spec.          | DC 12V-1A (100-250V~50/60Hz). Max.8W  |

## Trouble Shooting

| Problem  | Possible Causes  | What To Do   |
|--|--|--|
| <b>No display light up on front panel</b>                        | Power cord is not well plugged   | Check to make sure power cord is plugged properly into power socket.   |
| <b>No sound or picture, but the front panel red light is ON.</b> | The unit is in standby mode.   | Press the standby button.  |
| <b>No sound or picture.</b>                                      | The satellite dish is not pointing at the satellite.   | Adjust the dish.<br>Check the Signal Level in the Antenna Setup menu.  |
|  | No signal or weak signal.  | Check the cable connections, LNB and other equipment connected between the LNB and the receiver, and/or adjust the dish. |
| <b>Bad picture/ Blocking error.</b>                              | The satellite dish is not pointing at the satellite  | Adjust the dish.   |
|  | Signal is too strong.  | Connect a signal attenuator to the LNB input.  |
|  | Satellite dish is too small.   | Change to a larger dish.   |
|  | LNB noise factor too high.   | Change to an LNB with lower noise factor.  |
|  | The LNB is faulty.   | Change the LNB.  |
| <b>There is interference on your digital satellite channel.</b>  | The system is connected using RF cable and the output channel of the receiver interferes with an existing terrestrial channel or Video signal. | Change the receiver output channel to a more suitable channel, or connect the system using SCART cable.                  |
| <b>The RCU is not working.</b>                                   | Out of battery   | Change the battery.  |
|  | RCU is aimed at wrong direction.   | Aim the RCU at the unit, and make sure no blocks between the front panel and RCU.  |

**Note:** If you still cannot resolve the problem with above reference, please contact the local dealer or their after-sales service center.